
#### Shround 1800 Series

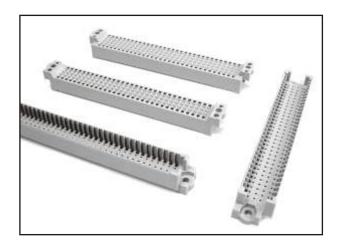

### Features

These shrouds are to be used on the rearside of the backplane

They are available either in self retaining design (press in) or in traditionnal design (fixing with screws or rivets)

They are available with different offsets to accomodate Different backplane thicknesses

They have to be assembled over the terminations of the connectors and fixed to the backplane

### Electrical

Insulation resistance:  $1000 \, \text{M}$  min Operating temperature:  $-55 \, \sim +125$ 

# 特 点

应用于背板后侧对插座的针加以保护与PCB通过螺钉或铆钉进行连接通过不同高度的调整垫块,可以适用于不同厚度的PCB安装时先将其套在连接器的引脚上,再通过螺丝(或铆钉)与PCB固定

## 特 性

绝缘电阻: 1000 M min 适用环境: - 55 ~+ 125

